


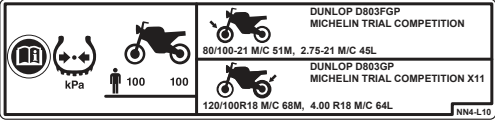


## Labels

The following pages show the meanings and locations of the labels on your 4RIDE.  
There is a specific symbol on each label. The meanings of each symbol and label are as follows.

1		<p><b>Tire information</b> Cold tire pressure (driver only)</p> <ul style="list-style-type: none"> <li>• Front: 100kpa</li> <li>• Rear: 100kpa</li> </ul>
2		<p><b>Keep chain adjusted and lubricated</b> 25 - 35 Mm (1.0 - 1.4 In)</p> <ul style="list-style-type: none"> <li>• Read owners manual</li> </ul>
3		<p><b>Caution label</b></p> <ul style="list-style-type: none"> <li>• Read the shop manual carefully</li> <li>• For your protection always wear a helmet and protective gear while riding.</li> <li>• Use premium unleaded gasoline only.</li> <li>• This motorcycle is not designed to transport a passenger.</li> </ul>
4		<p><b>Radiator cap label</b> <b>Danger</b></p> <ul style="list-style-type: none"> <li>• Never open when hot.</li> <li>• Hot coolant will scald you.</li> <li>• Relief pressure valve begins to open at 1.1 Kg/cm<sup>2</sup>.</li> </ul>