

5. Turn the eccentric chain adjuster to a position with a larger number to reduce the free play of the chain or towards a smaller number to increase it.
 - U Adjust the chain with the eccentric chain adjusters so that it is parallel with the centre line of the frame.
 - U Check that the stopper is between the teeth of the eccentric chain adjuster.
6. Recheck the drive chain tension and free wheel rotation.
7. After adjustment, tighten the axle nut to the specified torque.

Torque: 69 N•m (7.0 kgf•m)

8. Lubricate the drive chain.
9. Install the protective covers on the axle.