

Burnt out bulb

Follow the procedure described below to replace a burnt out bulb.

Be sure to let the bulb cool down before replacing it.

Use only the specified bulbs.

Check that the bulb works properly before riding the motorcycle.

See the "Specifications" section to find out the correct wattage of the bulb. 2 P. 106

Headlight bulb

1. Remove the 3 bolts.
2. Remove the front headlight assembly.
3. Disconnect the terminals from the bulb.

