

## Basic maintenance

Replace the tyres at your dealer.

To find out the recommended tyres, their pressure and the minimum tread depth, consult the "Specifications" section. ➔ P. 107

Always follow these instructions when changing tyres.

- Use the recommended tyres or equivalents of the same size, construction, speed rating and load capacity.
- Remember to replace the inner tube whenever you replace a tyre. An old inner tube will probably have stretched and could fail if installed in a new tyre.

## WARNING

The installation of unsuitable tyres on your motorcycle can affect riding and stability, which could result in an accident resulting in serious injuries or even death.

Always use tyres of the size and type recommended in this owner's manual.