

Air cleaner

Disassembly

Remove the seat box-rear fender assy. ➔ P. 56

- ➊ Remove the four bolts and air cleaner housing cover.
- ➋ Remove the air cleaner element assembly from the air cleaner housing.
- ➌ Remove the mesh device from the air cleaner element.
 - ▶ Check the mesh device for damage and replace it if necessary.
 - ▶ Thoroughly wash the air cleaner element in clean non-flammable cleaning solvent, then wash in a solution of hot water and liquid dish-washing soap. Apply special air cleaner oil or engine oil to the element and remove the excess oil.
 - ▶ Clean the inside of the air cleaner housing.

