

## Adding engine oil

If the engine oil is below or near the lower level  
➔ P. 57, add the recommended engine oil.

➔ P. 107

1. Remove the oil filler cap.  
Add the recommended oil until it reaches the upper level mark.
  - ▲ Place the motorcycle in an upright position on a firm, level surface when checking the oil level.
  - ▲ Do not fill above the upper level mark.
  - ▲ Make sure no foreign bodies enter the oil filler opening.
  - ▲ Clean up any spills immediately.
2. Firmly replace the oil filler cap.

### NOTICE

Excessive or insufficient amounts of oil can damage the engine. Do not mix different brands or weights of oil. They could affect engine lubrication.

To find out the recommended oil and indications for selecting oil, consult the "Basic maintenance" section. ➔ P. 45