

5. After the oil has drained completely, install the drain bolt with a new sealing washer. Tighten the drain bolt to the specified torque.

Torque: 22 N•m (2,2 kgf•m).

6. Pour specified transmission oil.

Specified transmission oil:
REPSOL MOTO TRANSMISSION (75W)
ELF HTX740 (75W)

Capacity:
 after draining **0.53 litre (0.53 US qt, 0.44 Imp qt)**
 after disassembly **0.57 litre (0.60 US qt, 0.50 Imp qt)**

Check the O-ring is in good condition, install the oil filler cap.

