

Adding coolant

1. If the coolant level drops below the neck of the filler hole, add the recommended coolant (➔ P. 47) until the level reaches the neck of the filler hole.
2. Remove the upper radiator mounting bolt.
3. Move the upper part of the radiator forward and remove the radiator cap.
 - ▲ Fill until the level reaches the neck of the filler hole.
 - ▲ Make sure no foreign bodies enter the radiator during the filling procedure.

⚠ WARNING

Removing the radiator cap while the engine is hot will allow the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

Changing the coolant

Unless you have the proper tools and necessary mechanical skills, have your dealer change the coolant.