


Drive chain tension inspection

Check the drive chain tension at various points on the chain. If it is not consistent at all points, some links may be kinked or have seized. Have your dealer inspect the chain.

1. Place the motorcycle on its side stand on level ground.
2. Turn off the engine. Shift the transmission into neutral.
3. Check the tension on the lower half of the drive chain, halfway between the engine sprocket and the rear wheel sprocket.

Drive chain slack:
25 to 35 mm

- ▲ Do not ride the motorcycle if the slack is greater than 50 mm.

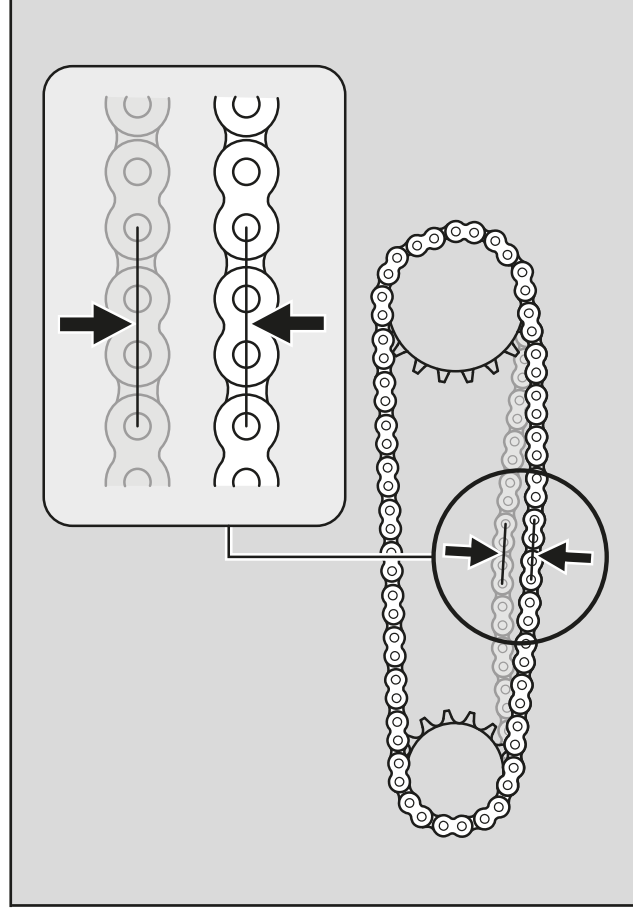

4. Move the motorcycle forward and check that the chain moves smoothly.
5. Inspect the engine and rear wheel sprockets. ➔ P. 46
6. Clean and lubricate the drive chain. ➔ P. 47