

Locating malfunctions

Engine does not start	P. 83
Warning indicators on.....	P. 84
Flat tyres.....	P. 85
Electrical problems.....	P. 90