

Engine does not start

Check the following points:

- Check the correct engine starting sequence.
 - ➔ P. 30
 - Check that there is petrol in the fuel tank.
 - Make sure engine stop button is not pushed.
 - Keep the throttle completely closed.
-