

Instruments, controls and other features

Total odometer

The screen is reset to 0.0 once the reading exceeds 999.999.

Tripmeter

The Trip 1 and Trip 2 partial odometers are reset to 0.0 once the reading exceeds 999.9.

Ride time

The Trip 1 and Trip 2 partial ride time are reset to 0.0 once the reading exceeds 999.9.

Document bag

The owner's manual, as well as registration and insurance information, can be kept in the plastic document bag located under the seat. ➔ P. 36

Ignition cut-off system

An angle sensor (bank angle) stops the engine and fuel pump after a few seconds in the event that the motorcycle tips over.