


## Cleaning the Crankcase Breather

---

1. Remove the crankcase breather tube.
2. Drain deposits into a suitable container.
3. Install the crankcase breather tube.

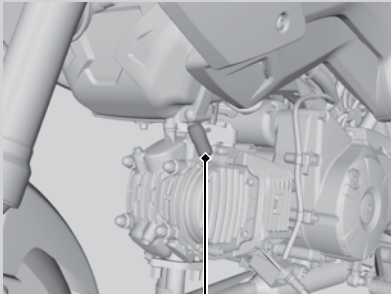

Crankcase breather tube