

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 79
<b>Warning Indicators On or Flashing</b> .....	P. 80
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL) .....	P. 80
ABS (Anti-lock Brake System) Indicator .....	P. 80
<b>Other Warning Indications</b> .....	P. 81
Fuel Gauge Failure Indication .....	P. 81
<b>Tire Puncture</b> .....	P. 82
<b>Electrical Trouble</b> .....	P. 88
Battery Goes Dead .....	P. 88
Burned-out Light Bulb .....	P. 88
Blown Fuse .....	P. 91
<b>Unstable Engine Operation Occurs</b>	
Intermittently .....	P. 92