Is Your Vehicle Ready to Drive?

Tie-rod The wheels need to be lifted off the ground to correctly

check the tie-rod ends, so it cannot be done in the predrive inspection. To have the tie-rod ends properly

inspected, see your Honda dealer.

Cargo Be sure items in the cargo bed are within the cargo limit

and are properly secured to prevent shifting (pages 55, 56).

Seat Belts Make sure both seat belts are in good condition and

operate properly. The seat belts must move smoothly when pulled out, and retract on their own when released. The latch plates should click securely into the buckles and

release when the release buttons are pushed firmly.

Remember to take care of any problem you find or have your Honda dealer correct it before you drive your Honda MUV.