

# Doors

---

Your Honda MUV is equipped with doors to prevent branches, gravel, or other debris from getting inside the driver's compartment, and to keep the driver's and passenger's legs and feet inside the vehicle if your vehicle ever tips or overturns. Be sure both doors are securely closed before driving your Honda MUV, and never remove a door.

If a door is damaged or does not close securely, see your dealer for repair or replacement.


The left and right doors can be opened in the same manner.

## Open

1. Pull up the handle.
2. Open the door.

## Close

1. Close the door securely until the second latch click is heard.
2. Make sure the door is closed securely.

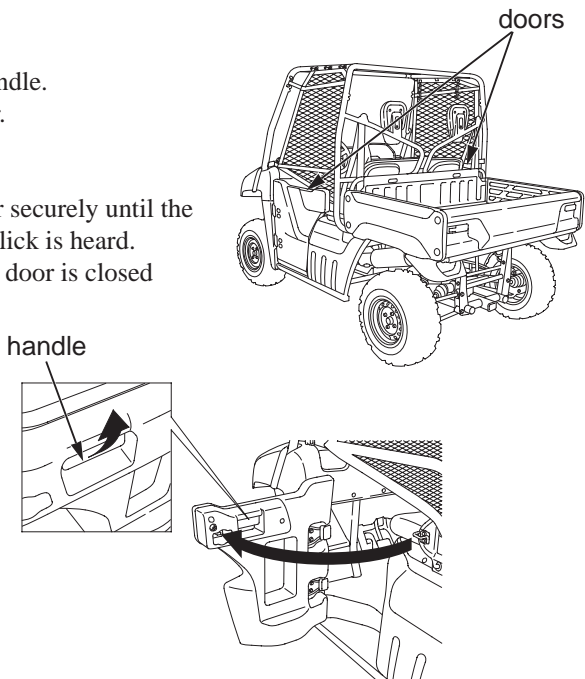

Do not drive the Honda MUV with the door open.