

# Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).														
FREQUENCY (Whichever comes first)		Initial maintenance	Regular maintenance interval						Note	Refer to page				
		× 100 mi	1	6	12	18	24	30			36			
ITEMS		× 100 km	1.5	10	20	30	40	50	60					
		Hours	20	100	200	300	400	500	600					
		Month	1	12										
Check engine oil and coolant		Check oil and coolant at fuel stop							101,114					
Check tires		Check inflation and condition once a month							147					
Check side net and snap hooks		●	●	●	●	●	●	●	32					
Check brake fluid		Check fluid level once a month							139					
Replace engine oil and oil filter		●	●	●	●	●	●	●	103					
* Inspect valve clearance		●	Every 600 miles (1,000 km) or 100 operating hours, otherwise adjust only if noisy							—				
* Clean spark arrester		Every 600 miles (1,000 km) or 100 operating hours, whichever comes first							133					
Clean air cleaner elements													1	119
Check air cleaner housing drain tube													2	122
Check spark plug														130
* Inspect idle speed		●								—				
* Check fuel lines and connections				●		●		●	—					
Check front and rear brakes		●			●			●	3	138				
Check front and rear differential oil		●			●			●	109,111					

- \* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 214).

Note 1 Service more frequently when operating in dusty areas, sand or snow.

Note 2 Service more frequently when operated in muddy, very wet conditions, or freezing temperatures.

Note 3 Service more frequently when operated in muddy conditions.