


# Side Nets

The left and right side nets can be set up in the same manner.

## Set up

1. Fasten the side net buckle and hook the side net snap hooks.
2. Tighten the belt on the side net buckle.
3. Tighten the belt on the upper side net ring.
4. Tighten the belt on the lower side net ring.

## **LEFT SIDE INSIDE**

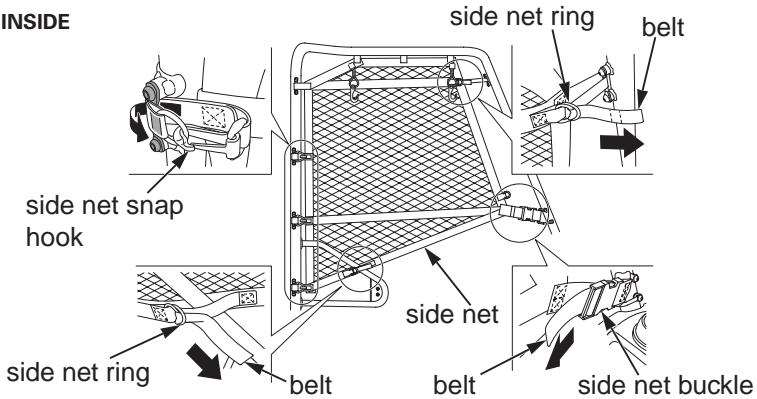

Inspect the side nets and their mounting hardware for damage as specified in the maintenance schedule on page 82.

## Side net snap hooks wear limit

Inspect the side net snap hooks for wear. If the side net snap hook become less than 0.24 in (6mm), see your MUV dealer for replacement.

