

Side Nets

The left and right side nets can be opened in the same manner.

Open


1. Release the side net buckle.
2. Hook the side net ring onto the side net hook while lifting the side net.

Close

1. Unhook the side net ring from the side net hook.
2. Fasten the side net buckle.

Always return the side nets to their normal positions, properly fastened, and tightened before driving.

**LEFT SIDE
OUTSIDE**

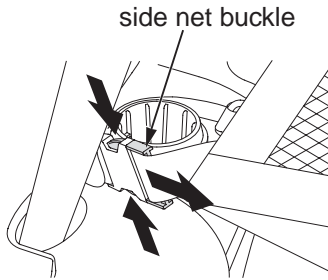

**LEFT SIDE
INSIDE**

