

# Storing Your Honda

---

## Removal from Storage

Refer to *Safety Precautions* on page 79.

1. Uncover and clean your Honda MUV.
2. If your Honda MUV has been stored for more than four months—change the engine oil (page 103).
3. If your Honda MUV has been stored for more than two months—ask your dealer to drain and replace the fuel.
4. Charge the battery (page 160) as required. Install the battery.
5. Perform a pre-drive inspection (page 54), then test-drive your Honda MUV at low speeds.