

# If Your Engine Quits or Won't Start

---

<b>SYMPTOM: Starter motor doesn't operate.</b>	
<b>POSSIBLE CAUSE</b>	<b>WHAT TO DO</b>
transmission not in neutral	Shift into neutral or press on the brake pedal.
blown fuse	Replace with a new fuse of the same rating (page 188).
battery lead loose	Tighten the battery leads.
low battery	Charge the battery (page 160). If charging doesn't help, see your dealer.
faulty starter motor	If all possible causes are negative, the starter motor may be faulty. See your dealer.

<b>SYMPTOM: Starter motor works, but the engine won't start.</b>	
<b>POSSIBLE CAUSE</b>	<b>WHAT TO DO</b>
out of fuel	Fill the fuel tank.
flooded engine	See starting the engine step 5 (page 63).
loose or unconnected spark plug cap	Install the spark plug cap securely. If the engine still won't start, see your dealer.
loose battery cables	Tighten the battery terminal bolts.
weak battery	Charge the battery (page 160). If charging doesn't help, see your dealer.