


Front Turn Signal Bulb

The right and left turn signal bulbs replacement can be done in the same way.

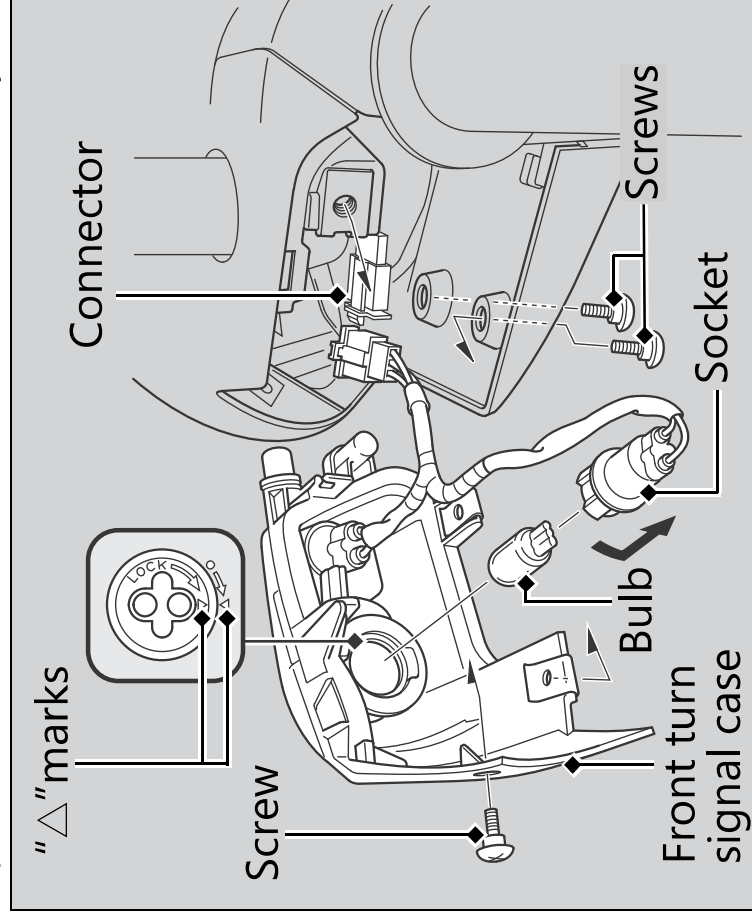

1. Remove the front turn signal case by removing the screws.
2. Disconnect the connector.

3. Turn the socket counterclockwise, then pull it out.
4. Pull out the bulb without turning.
5. Install a new bulb and reinstall the parts in the reverse order of removal.
 - Install the socket by turning it clockwise. Make sure that the "△" marks on the socket and front turn signal housing are aligned.
 - Use only the amber bulb.