


Instruments (Continued)

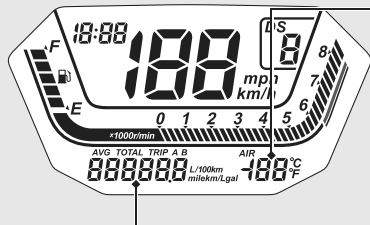

Air temperature gauge

Shows ambient temperature.

Display range: 14 to 122°F (-10 to 50°C)

- Below 14°F (-10°C): “- -” is displayed
- Above 122°F (50°C): 122°F (50°C) flashes

The temperature readout may be incorrect at low speeds due to reflected heat.

Odometer [TOTAL] & Tripmeter [TRIP A/B] & Current fuel mileage & Average fuel mileage [AVG] & Fuel consumption meter

The **[SEL]** button selects the odometer, tripmeter A, tripmeter B, current fuel mileage, average fuel mileage and fuel consumption.

► To reset the tripmeter: **←P.22**

