 
Instruments (Continued)

To reset the tripmeter, average fuel mileage and fuel consumption

1 To reset tripmeter A, average fuel mileage, and fuel consumption together, press and hold the SET button.



When they are reset, "0.0" and then "----" are displayed at each indication.



3 Then, the display returns to the last selected indication.



4 To reset tripmeter B, press and hold the SET button with tripmeter B displayed.

