


Setting Mode

Following items to change sequentially.

- Changing of display backlight color and ring illumination color
- Backlight brightness adjustment
- Clock setting
- Changing of speed and mileage unit
- Changing of fuel mileage meter unit
- Changing of temperature gauge unit

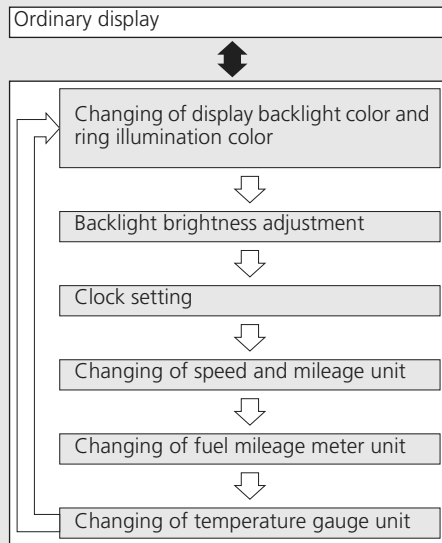

 Press and hold the **[SEL]** button and **[SET]** button

 Press the **[SET]** button