


## Storage Equipment *(Continued)*

### Accessory Socket

The accessory socket is located in the left front utility box.

Open the cover to access to the accessory socket.

Rated capacity is  
**12W (12V, 1A).**

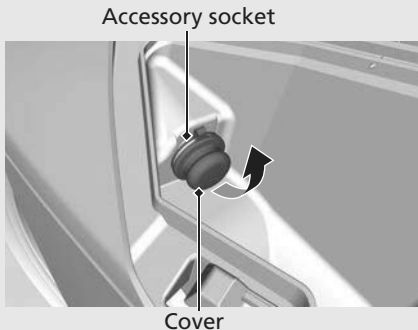

- ▶ To prevent the battery run down or weak the battery, keep the engine running while drawing current from the socket.
- ▶ Set the headlight in the low beam. The battery run down or damage to the accessory socket cause result.
- ▶ To prevent entry of foreign matter into the socket, be sure to close the cover when the accessory socket is not used.

**Opening the front utility box** ➔ P.46