



Storage Equipment *(Continued)*

Rear seat horizontal position adjustment

Rear seat can be adjusted forward and backward using the hex wrench in the tool kit.

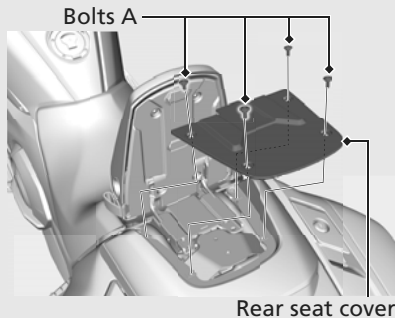

- 1 Adjust the rear seat to the upright position.
➔ P.49
- 2 Remove the bolts A and remove the rear seat cover.

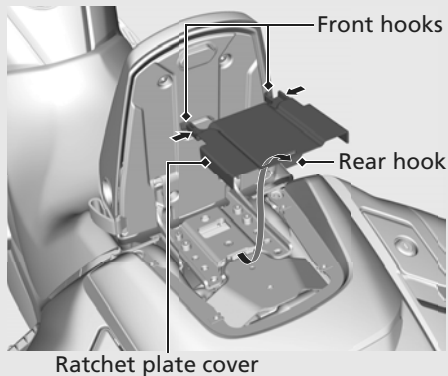

- 3 While pulling the ratchet plate cover toward rear, remove the rear hook and lift the cover up.
- 4 Tip the rear seat back in some degree. Slide the ratchet plate cover forward and remove the front hooks, then lift it up.