

## ■ Rear Wheel

### Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. Release the parking brake.
3. Remove the mounting bolts and remove the parking brake caliper.

