

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 63

Fuse Box Fuses

1. Remove the front seat. ► P. 75
2. Remove the fuse box cover.
3. Pull out the fuses one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Install the fuse box cover.
5. Install the front seat.

