


Instruments

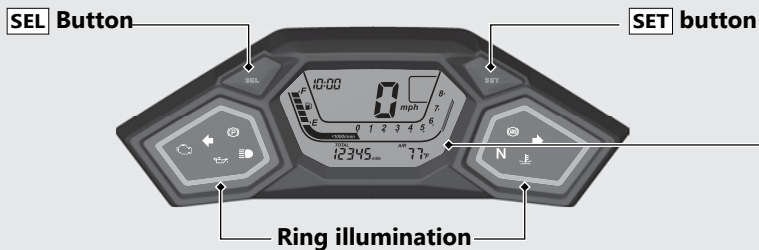

Display Check

When the ignition switch is turned to the ON position, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.

The display backlight color and the ring illumination color

You can change the setting of the display backlight color and the ring illumination color. When you set to "COL A" (COLOR AUTO), the backlight color and ring illumination color changes in accordance with changing between N, D and S or changing between MT mode and AT mode. Default setting is "COL A."

Changing of display backlight color and ring illumination color: ➔ P.28