

**(P) Parking brake indicator**

Lights as a reminder that you have not released the parking brake lever.

**High coolant temperature indicator**

Comes on briefly when the ignition switch is turned to the ON position.

**If it comes on while riding: → P.108**



**⇒ Right turn signal indicator**

**N Neutral indicator**

Comes on when the transmission is in Neutral.

**High beam indicator**

**⇐ Left turn signal indicator**