

Parking Brake

Parking Brake Lever

Be sure the parking brake is applied while parking and warming up the engine.

- ▶ Make sure the parking brake lever is released before riding.

To apply the parking brake

Squeeze the front brake lever and pull the parking brake lever back to lock the rear wheel.

- ▶ The parking brake lock will not function if the parking brake is not adjusted properly.

➡ P.96

To release the parking brake

Release the parking brake lever by lightly pulling in the lever.

- ▶ Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is no drag on the rear wheel.

