


Storage Equipment *(Continued)*

Rear Seat (Backrest)

You can fold back the rear seat and use it as a backrest. The backrest angle can be adjusted to three levels.

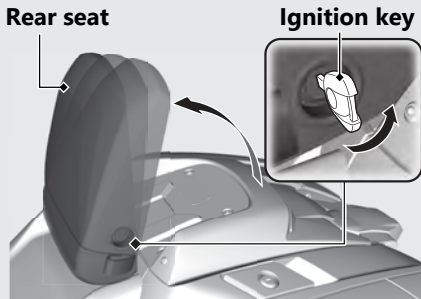

To fold back

- 1 Insert the ignition key into the lock. Fold back the rear seat while turning the key counterclockwise and holding it.
- 2 Remove the ignition key.

To return

- 1 Insert the ignition key into the lock. Use your hand to support the rear seat, do not let the rear seat fold down quickly. Return the rear seat to its original position while turning the key counterclockwise and holding it.
- 2 Remove the ignition key.

⚠ WARNING

Only carry a passenger on your motorcycle if the rear seat is installed and locked in the seat (non-backrest) position.

Carrying a passenger without using the passenger seat increases the risk of the passenger falling off your motorcycle.

If your passenger falls off your motorcycle they may be seriously injured or killed.