

Items		Frequency*1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line	↗			I		I		I		–	
	Throttle Operation	↗			I		I		I		102	
	Air Cleaner*2					R			R		75	
	Crankcase Breather*3			C	C	C	C	C	C		103	
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R									83
	Valve Clearance	↗					I				–	
	Engine Oil		R		R		R		R	1 Year	88	
	Engine Oil Filter		R				R				88	
	Clutch Oil Filter		R				R				90	
	Engine Idle Speed	↗			I		I		I		–	
	Radiator Coolant*4				I		I		I	3 Years	92	
	Cooling System	↗			I		I		I		–	
	Evaporative Emission Control System*5	↗					I				–	

**Maintenance Level**

- ↗ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 146).
- ↘ : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

**Maintenance Legend**

- I : Inspect (clean, adjust, lubricate, or replace if necessary)
- R : Replace
- L : Lubricate
- C : Clean