

Troubleshooting

Engine Will Not Start	P. 107	Battery Goes Dead	P. 122
Overheating (High coolant temperature indicator is on)	P. 108	Burned-out Light Bulb	P. 122
Warning Indicators On or Flashing	P. 109	Blown Fuse	P. 126
Low Oil Pressure Indicator	P. 109		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 109		
ABS (Anti-lock Brake System) Indicator	P. 110		
If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 111		
Other Warning Indications	P. 112		
Fuel Gauge Failure Indication.....	P. 112		
Tire Puncture	P. 113		
Electrical Trouble	P. 122		