 


Tachometer ➔ P.29**NOTICE**

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Speedometer

Tachometer red zone
(excessive engine rpm range)

**Clock**

To set the clock: ➔ P.36

D indicator NC700XD/750XD

Comes on when the D mode is selected in the AT MODE. ➔ P.64

S indicator NC700XD/750XD

Comes on when the S mode is selected in the AT MODE. ➔ P.64

Total/Fuel mileage display ➔ P.24**Gear position indicator** ➔ P.35**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.85 US gal (3.2 L)



The reserve tripmeter display and reserve fuel consumption display show at the same time.

If the fuel gauge indicator flashes in a repeat pattern or turns off: ➔ P.133