


Ignition Switch

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

Steering Lock:  P.54

N-D switch

To shift between Neutral and AT MODE.  P.64

Horn button


Start button


A/M switch

To shift between the AT MODE and MT MODE.

 P.64

Engine stop switch

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Off) position (the starter motor will not operate) to stop the engine.