

Instruments *(Continued)*

UNIT Setting Mode

1 Changing the speed and mileage unit:

- a Select the UNIT setting mode. (P34)
- b Press the SEL button to select either “mph” and “mile” or “km/h” and “km”.
- c **When selecting the “mph” and “mile”.**
Press the SET button. The speed and mileage unit is set, and the display returns to the ordinary display.
When selecting the “km/h” and “km”.
Press the SET button. The speed and mileage unit is set, and then the display moves to the changing the fuel mileage meter unit.

2 Changing the fuel mileage meter unit:

- a Press the SEL button to select either “L/100km” or “km/L”.
- b Press the SET button. The fuel mileage meter unit is set, and the display returns to the ordinary display.