

To reset the tripmeter

To reset the tripmeter, press and hold the SET button while the tripmeter that you want to reset is being displayed.

Also, after refueling more than the reserve amount, tripmeter A, average fuel mileage A, and fuel consumption A will automatically reset when your motorcycle travels 0.06 mile (0.1 km). You can activate or deactivate the automatic reset mode by refueling. **➔ P.36**

Backlight brightness setting

The brightness of the display can be set to H (high) or L (low).

When the SET button is pressed, the following display appears and the brightness is set.

► The brightness of the display can be adjusted to H (high)/L (low) for each. **➔ P.36**

