


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

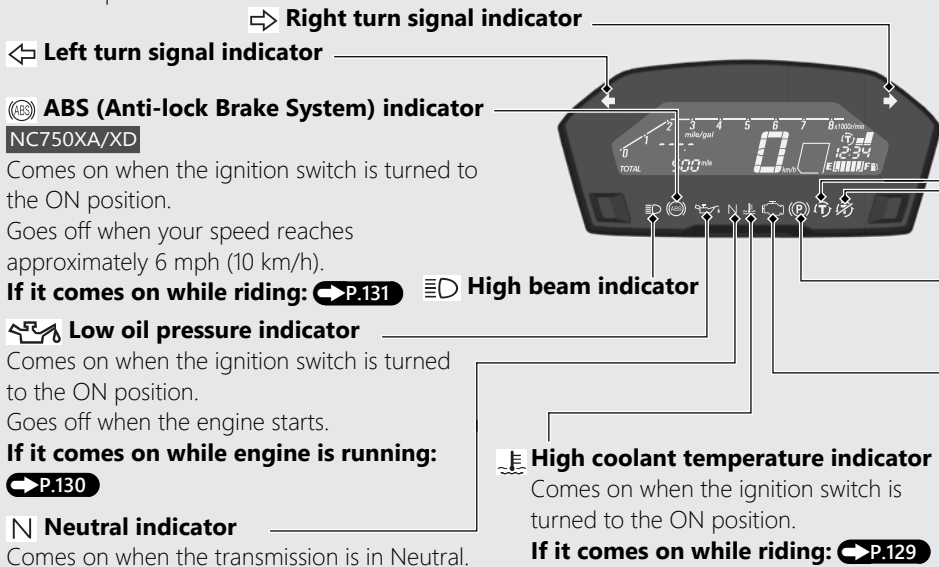

⇒ **Right turn signal indicator**

⇐ **Left turn signal indicator**

(ABS) **ABS (Anti-lock Brake System) indicator**

NC750XA/XD

Comes on when the ignition switch is turned to the ON position.

Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: ➔ **P.131**

≡ **High beam indicator**

🛢️ **Low oil pressure indicator**

Comes on when the ignition switch is turned to the ON position.

Goes off when the engine starts.

If it comes on while engine is running:

➔ **P.130**

N **Neutral indicator**

Comes on when the transmission is in Neutral.

🌡️ **High coolant temperature indicator**

Comes on when the ignition switch is turned to the ON position.

If it comes on while riding: ➔ **P.129**