

 **Torque Control indicator** NC750XA/XD

- Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

**If it comes on while riding:**  P.132


 **Torque Control OFF indicator** NC750XA/XD


Comes on when the Torque Control is turned off.

 **Parking brake indicator** NC750XD

Lights as a reminder that you have not released the parking brake lever.

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position.

Comes on when the ignition switch is turned on with the engine stop switch in the  (Stop) position.

**If it comes on while engine is running:**  P.130