



1. Remove the lower cowl. ► P. 97
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug bases.
4. Remove the spark plugs using a suitable spark plug wrench.

5. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling.
  - If the erosion or deposit is heavy, replace the plug.
6. Make sure that a 1.2 mm wire-type feeler gauge cannot be inserted between the spark plug gap. If the gauge fits in the gap, replace the plug with a new one.

