

Troubleshooting

Engine Will Not Start	P. 128
Overheating (High coolant temperature indicator is on)	P. 129
Warning Indicators On or Flashing	P. 130
Low Oil Pressure Indicator	P. 130
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 130
ABS (Anti-lock Brake System) Indicator	P. 131
Torque Control Indicator.....	P. 132
If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 133
Other Warning Indications	P. 134
Fuel Gauge Failure Indication.....	P. 134
Tire Puncture	P. 135

Electrical Trouble	P. 143
Battery Goes Dead.....	P. 143
Burned-out Light Bulb	P. 143
Blown Fuse	P. 146