

## Shifting Gears *(Continued)*

**Neutral (N):** Neutral is selected automatically when you turn the ignition switch to the ON position.

### **If neutral is not selected when you turn the ignition switch to the ON position.**

- ▶ Turn the ignition switch to the OFF position and then to the ON position again.
- ▶ If neutral is still not selected after turning the ignition switch to the OFF position, and then to the ON position again. ➡ **P.135**

You may hear (click) noises when the transmission shifts to Neutral (N). This is normal.

### **When you can change between N and D**

- ▶ Motorcycle is stopped and the engine is idling.
- ▶ Throttle is completely closed. It is not possible to change from Neutral to D mode while the throttle is applied.
- ▶ You cannot change between N and D mode while the wheels are rotating.
- ▶ Side stand is raised.

#### **NOTICE**

To prevent clutch damage, do not use the throttle to keep the motorcycle stopped uphill.