

Troubleshooting

Engine Will Not Start	P. 84	Electrical Trouble	P. 89
Overheating (High coolant temperature indicator is on)	P. 85	Battery Goes Dead	P. 89
Warning Indicators On or Flashing	P. 86	Burned-out Light Bulb	P. 89
PGM-FI (Programmed Fuel Injection)		Blown Fuse.....	P. 94
Malfunction Indicator Lamp (MIL).....	P. 86	Unstable Engine Running Occurs Sporadically	P. 95
Other Warning Indication	P. 87		
Fuel Gauge Failure Indication	P. 87		
Tire Puncture	P. 88		