


Battery Lid

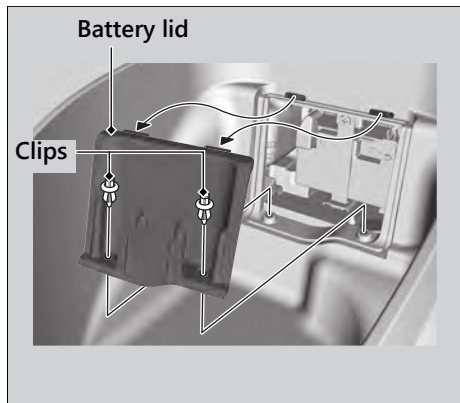

Removal

1. Open the seat. ► P. 38
2. Remove the clips. ► P. 65
3. Remove the battery lid.

Installation

Install the parts in the reverse order of removal.