


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.


 **High coolant temperature indicator**
If it comes on while riding:  P.88


 **High beam indicator**

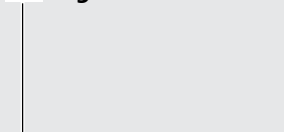

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while engine is running:  P.89

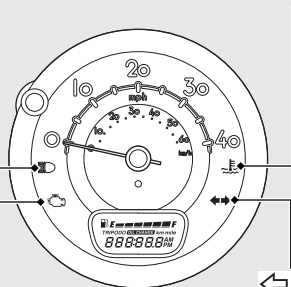

 **Turn signal indicator**