


## Battery Lid

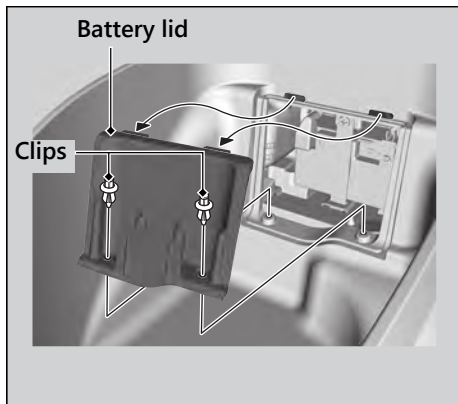

### Removal

1. Open the seat. ► P. 39
2. Remove the clips. ► P. 67
3. Remove the battery lid.

### Installation

Install the parts in the reverse order of removal.