


# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

## High coolant temperature indicator

If it comes on while riding:  P.89

## High beam indicator

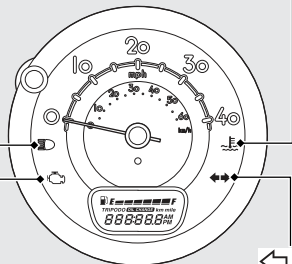

## Turn signal indicator

## PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while engine is running:  P.90