

Indicators & Displays

Speedometer

This display shows speed in miles or kilometers per hour.

Mileage Unit Change

The speedometer, odometer, tripmeter and maintenance tripmeter show in either "MPH" and "MILE" or "KM/H" and "KM".

To change the mileage unit, press and hold the SEL/SET switch for more than 5 seconds in odometer mode (page 25) with the vehicle stopped.

